



The *Original* Hand Push Spin Mop USER'S GUIDE



Welcome to a quick, easy and fun cleaning experience!

We'd love to hear how Twist and Shout Mop is working out for you!

Please feel free to drop us a line at: care@TwistAndShoutMop.com

Robin Cheung

- Founder & CEO

Are You Ready to Twist and Shout?

To get started quickly, check out our "How To" videos at:
www.TwistAndShoutMop.com



Need Help?

We want you to love what you purchased. If something is not right or if you need help, please contact us at: care@twistandshoutmop.com

We guarantee a response within 24 hours.

Assembly Instructions

- 1** Install all 3 parts of the mop handle together.



- 2** Align the blue disc base with the mop head ring.



- 3** Using both feet, step on the disc base to snap in the mop head until you hear a "CLICK".



Mop Head Removal Instructions



Step on the **microfiber** with two feet, then pull up the handle with both hands until the disc base is detached from the mop head.



OR



Step on the **microfiber** where your foot faces the screw. Push the handle away until the disc base snaps off.



Do not step on the **blue disc base** while pulling the handle up. This could permanently damage the disc base.



Operating Instructions as Wet Mop

1

Flip the white lever down to "SPIN & MOP" and leave it there during mopping.



2

Straighten the mop handle while stepping on the disc base.



3

Rinse the mop head and pull it out slowly to ensure that all strands are straight.




4

Place all microfiber strands inside the wringer. Then, push the handle up and down a few times to spin dry the mop head.



Step on the disc base to angle the handle, then start mopping.

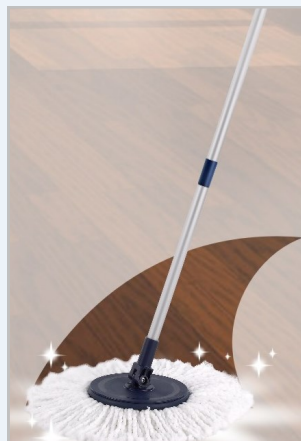

Do not use the mop as a scrubbing tool with excessive pressure on the handle. Otherwise it may get bent and stop spinning.





USER'S GUIDE

"How To" videos: www.TwistAndShoutMop.com



Quick Tips



Mops heads are machine washable up to 300X. Use delicate wash cycle then air dry.



Sweep or vacuum prior to wet mopping.



Use water or any cleaning solution of your choice. Avoid using bleach.



Flip the white lever up only when cleaning windows or walls.

Replacement & Spare Parts

Replacement mop heads, spare mop handles and buckets are available for purchase at:
www.TwistAndShoutMop.com

Warranty Information



The product is warranted for **1 year** from the date of purchase against all defects in craftsmanship and materials when used in compliance with the instructions in the User's guide.

For warranty claims, replacement parts or assistance with the product, please email us at: care@TwistAndShoutMop.com.

Need Help?

We want you to love what you purchased. If something is not right or if you need help, please contact us at: care@twistandshoutmop.com

We guarantee a response within 24 hours.